



Install the suspension arms in this order:
C7 → C8 → C15

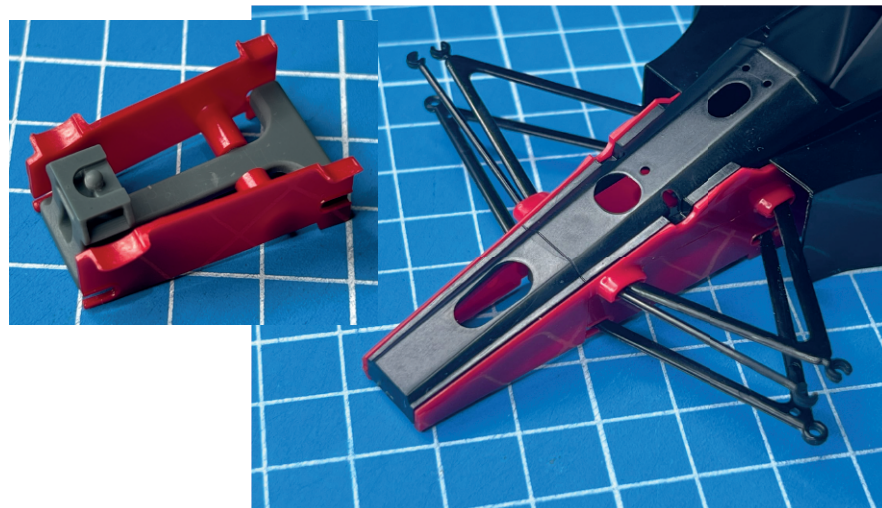

Cut the suspension kit parts as shown to insert them into the jig.

Glue parts B13/B14 to the parts B18/B19, fill and sand before add it to the jig and assembly with the body A12.

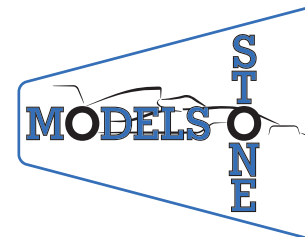

COPYRIGHT © 2024
by STONE Models

A088/2024