

INDYCAR DW12 / IR18

DETAIL-UP SET 2

1/20 scale kit




MODELS
STONE

ASSEMBLY INSTRUCTIONS



PARTS DETAIL

• Resin Parts

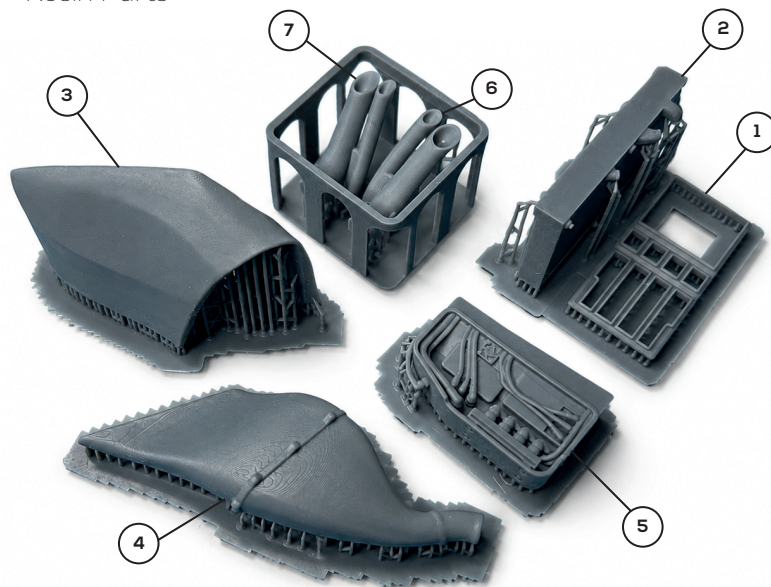

⚠ CAUTION

- Read carefully and fully understand all instructions before assembly.
- Extra care should be taken when using tools avoid personal injury.
- When using paint and cement (not included) read and follow their instructions.
- Assemble the kit away from the reach of children.
- Keep all parts and vinyl bags away from children.




IMPORTANT INFORMATION


- The kit is made by 3D print resins.
- Don't use Resin Wash.
- Thin resin parts are easy to deform. Carefully adjust with a hair dryer or hot water at 60°C or higher. Don't boil resin parts.
- Don't immerse in water, hot water, or solvents for a long time. Absorbs water and solvents.
- After washing with water, dry completely.
- Smooth the parts by sand papers and nippers.
- Various type of putty are available.
- Use epoxy or CA glue only.
- Please try temporarily assembly the kit before applying any adhesives.
- Recommend to apply primer surfacer before painting.

A141/2026


1

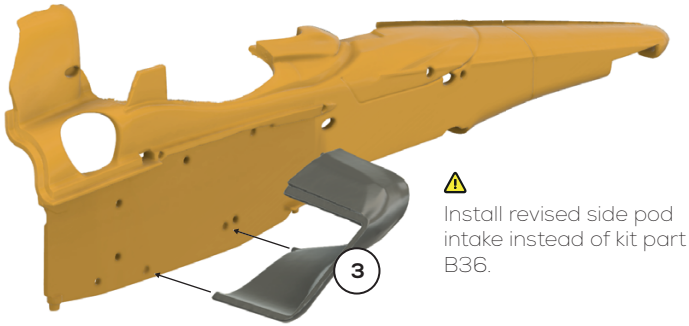Side Pod Intake
(right side)

2

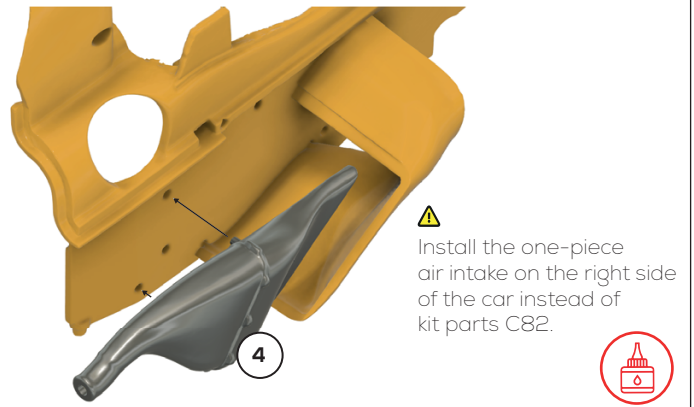Chevy Air Intake
(right side)

3

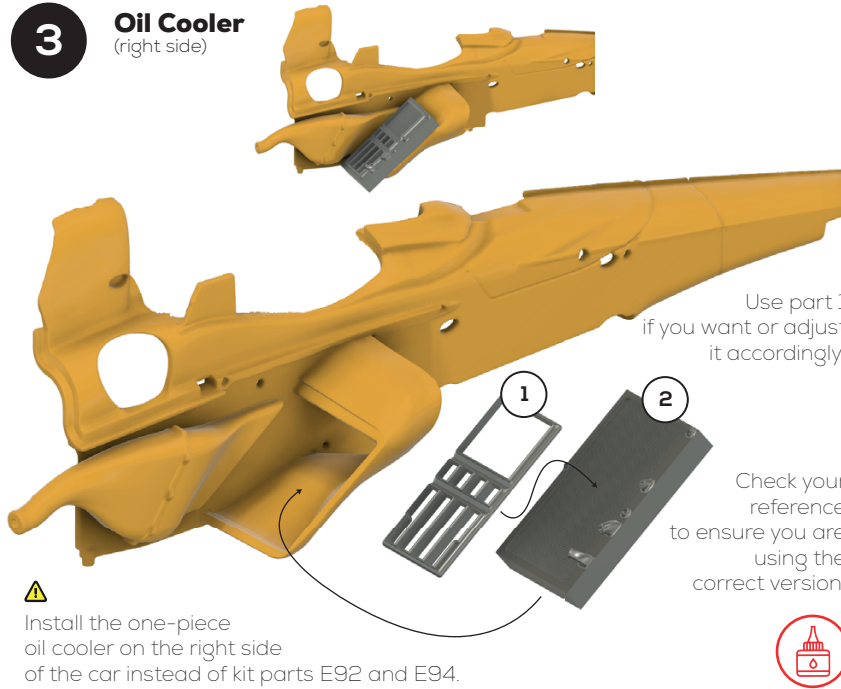Oil Cooler
(right side)


4

Electronics Basket
(left side)

5

Exhaust Pipes
(left side)

Use parts 6 for the left engine side instead of kit part G77.

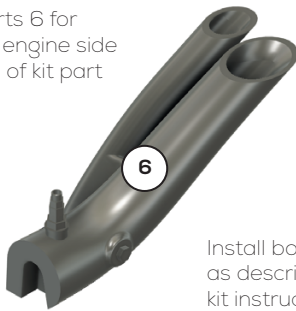

(right side)

Use parts 7 for the right engine side instead of kit part G78.



Install both parts as described in the kit instructions.

**INDYCAR DETAIL-UP SET 1**
FOR SALVINOS MODELS

DALLARA DW12 / IR18 (Rear Shocks | Radiators)



1/20 SCALE

A137/2026

INDYCAR DETAIL-UP SET 3
FOR SALVINOS MODELS

DALLARA DW12 / IR18 (Honda Engine)



1/20 SCALE

A142/2026

Check out the other Stone Model
Indycar Detail-Up Sets as well.

Explanation of symbols:Use a file or
sandpaper

Drill

Glue

Use a knife or
scalpelDon't use a
knife or side cutter


Use a scissors

Use a side
cutter

Screw



STONE Models

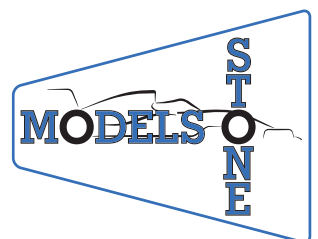

COPYRIGHT © 2026
by STONE Models